

TPE3 40-150-S BQQE 3 x 400V PN6/10

Grundfos Pump 99272209



Thank you for your interest in our products

Please contact us for more information, or visit our website


<https://www.lenntech.com/grundfos/TPE0S2/99272209/TPE3-40-150-S-A-F-A-BQQE.html>

info@lenntech.com

tel. +31-15-261.09.00


fax. +31-15-261.62.89

Position	Qty.	Description
	1	TPE3 40-150-S A-F-A-BQQE  Product No.: 99272209 Single-stage, close-coupled, volute pump with in-line suction and discharge ports of identical diameter. The pump is of the top-pull-out design, i.e. the power head (motor, pump head and impeller) can be removed for maintenance or service while the pump housing remains in the pipework. The shaft seal is according to EN 12756. Pipework connection is via PN 6/10 DIN flanges (EN 1092-2 and ISO 7005-2). The pump is fitted with a fan-cooled, permanent-magnet synchronous motor. The motor includes a frequency converter and PI controller in the motor terminal box. This enables continuously variable control of the motor speed, which again enables adaptation of the performance to a given requirement. The pump is fitted with a combined temperature- and differential-pressure sensor. Further product details The pump is suitable for applications requiring pressure or temperature control and offers following control modes: - AUTOADAPT. This function continuously adjusts the proportional-pressure curve and automatically sets a more efficient curve without compromising comfort demands. - FLOWADAPT. This control mode combines AUTOADAPT with a flow-limiting function. The pump continuously monitors the flow rate to ensure the desired maximum flow is not exceeded. This will save the cost of a separate pump-throttling valve. - Constant differential pressure. The pump head is kept constant, independent of the flow in the system. - Proportional pressure. The head of the pump will increase proportionally to the flow in the system to compensate for the large pressure losses in the distribution pipes. - Constant temperature. The return-pipe temperature is kept constant. Note: If the pump is intalled in the flow pipe, an external temperature sensor must be installed in the return pipe of the system. - Constant differential temperature. The differential temperature can be measured by a differential-temperature sensor or two separate temperature sensors. - Constant curve. The pump can be set to run at a constant speed in the range of 25 to 100 % of the maximum speed. The control panel on the motor terminal box features a four inch TFT display, push-buttons and the Grundfos Eye indicator. The display gives an intuitive and user-friendly interface to all functions. The push-buttons are used to navigate through the menu structure to access pump and performance data on site and enable setting of required setpoint as well as setting of pump to "Min." or "Max." operation or to "Stop". Communication with the pump is also possible by means of the Grundfos GO Remote (accessory). The remote control enables further settings as well as reading out of a number of parameters such as "Actual value", "Speed", "Power input" and total "Power consumption". The Grundfos Eye indicator on the control panel provides visual indication of pump status: - "Power on": Motor is running (rotating green indicator lights) or not running (permanently green indicator lights) - "Warning": Motor is still running (rotating yellow indicator lights) or has stopped (permanently yellow indicator lights) - "Alarm": Motor has stopped (flashing red indicator lights). The product's minimum efficiency index (MEI) is greater or equal to 0.70. This is by the Commission Regulation (EU) considered as an indicative benchmark for best-performing water pump available on the market as from 1 January 2013. Pump Pump housing and pump head are electrocoated to improve the corrosion resistance.

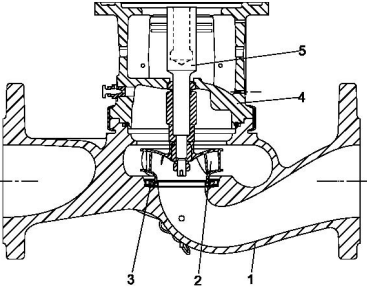Position	Qty.	Description
		Electrocoating includes: 1) Alkaline-based cleaning. 2) Pretreatment with zinc phosphate coating. 3) Cathodic electrocoating (epoxy). 4) Curing of paint film at 200-250 °C.  1: Pump housing 2: Impeller 3: Neck ring 4: Pump head/motor stool 5: Stub shaft The pump housing is provided with a replaceable stainless steel/PTFE neck ring to reduce the amount of liquid running from the discharge side of the impeller to the suction side. The impeller is secured to the shaft with a nut. The pump is fitted with an unbalanced rubber bellows seal with torque transmission across the spring and around the bellows. Due to the bellows, the seal does not wear the shaft, and the axial movement is not prevented by deposits on the shaft. Primary seal: - Rotating seal ring material: Silicon carbide (SiC) - Stationary seat material: Silicon carbide (SiC) This material pairing is used where higher corrosion resistance is required. The high hardness of this material pairing offers good resistance against abrasive particles. Secondary seal material: EPDM (ethylene-propylene rubber) EPDM has excellent resistance to hot water. EPDM is not suitable for mineral oils. The motor stool forms connection between the pump housing and the motor, and is equipped with a manual air vent screw for venting of the pump housing and the shaft seal chamber. The sealing between motor stool and pump housing is an O-ring. The central part of the motor stool is provided with guards for protection against the shaft and coupling. The pump stub shaft is fastened directly on the motor shaft with key and set screws. Motor The motor is a totally enclosed, fan-cooled motor with principal dimensions to IEC and DIN standards. Electrical tolerances comply with IEC 60034. The motor efficiency is classified as IE5 in accordance with IEC 60034-30-2. The motor requires no external motor protection. The motor control unit incorporates protection against slow- and quick-rising temperatures, e.g. constant overload and stalled conditions. The terminal box holds terminals for these connections: - one dedicated digital input - two analog inputs, 0(4)-20 mA, 0-10 V - one configurable digital input or open-collector output - Grundfos combined temperature and differential pressure sensor (separate connected) - 24 V voltage supply for sensors - two signal relay outputs (potential-free contacts) - GENIbus connection - interface for Grundfos CIM fieldbus module. Technical data Liquid:

Position	Qty.	Description
		Pumped liquid: Water Liquid temperature range: -25 .. 120 °C Liquid temperature during operation: 20 °C Density: 998.2 kg/m³ Technical: Speed for pump data: 3900 rpm Rated flow: 16.1 m³/h Rated head: 9.3 m Actual impeller diameter: 74 mm Primary shaft seal: BQQE Curve tolerance: ISO9906:2012 3B Materials: Pump housing: Cast iron EN-JL1040 ASTM A48-40 B Impeller: Composite PES/PP 30% GF Installation: Range of ambient temperature: -20 .. 50 °C Maximum operating pressure: 10 bar Flange standard: DIN Pipe connection: DN 40 Pressure rating: PN 6/10 Port-to-port length: 250 mm Flange size for motor: 56C Electrical data: Motor type: 71A IE Efficiency class: IE5 Rated power - P2: 0.55 kW Mains frequency: 50 Hz Rated voltage: 3 x 380-500 V Rated current: 1,35-1,30 A Cos phi - power factor: 0,77-0,61 Rated speed: 360-4000 rpm Efficiency: 85,9% Enclosure class (IEC 34-5): IP55 Insulation class (IEC 85): F Others: Minimum efficiency index, MEI ≥: 0.7 ErP status: EuP Standalone/Prod. Net weight: 24.3 kg Gross weight: 31.8 kg Shipping volume: 101 m³

99272209 TPE3 40-150-S 50 Hz


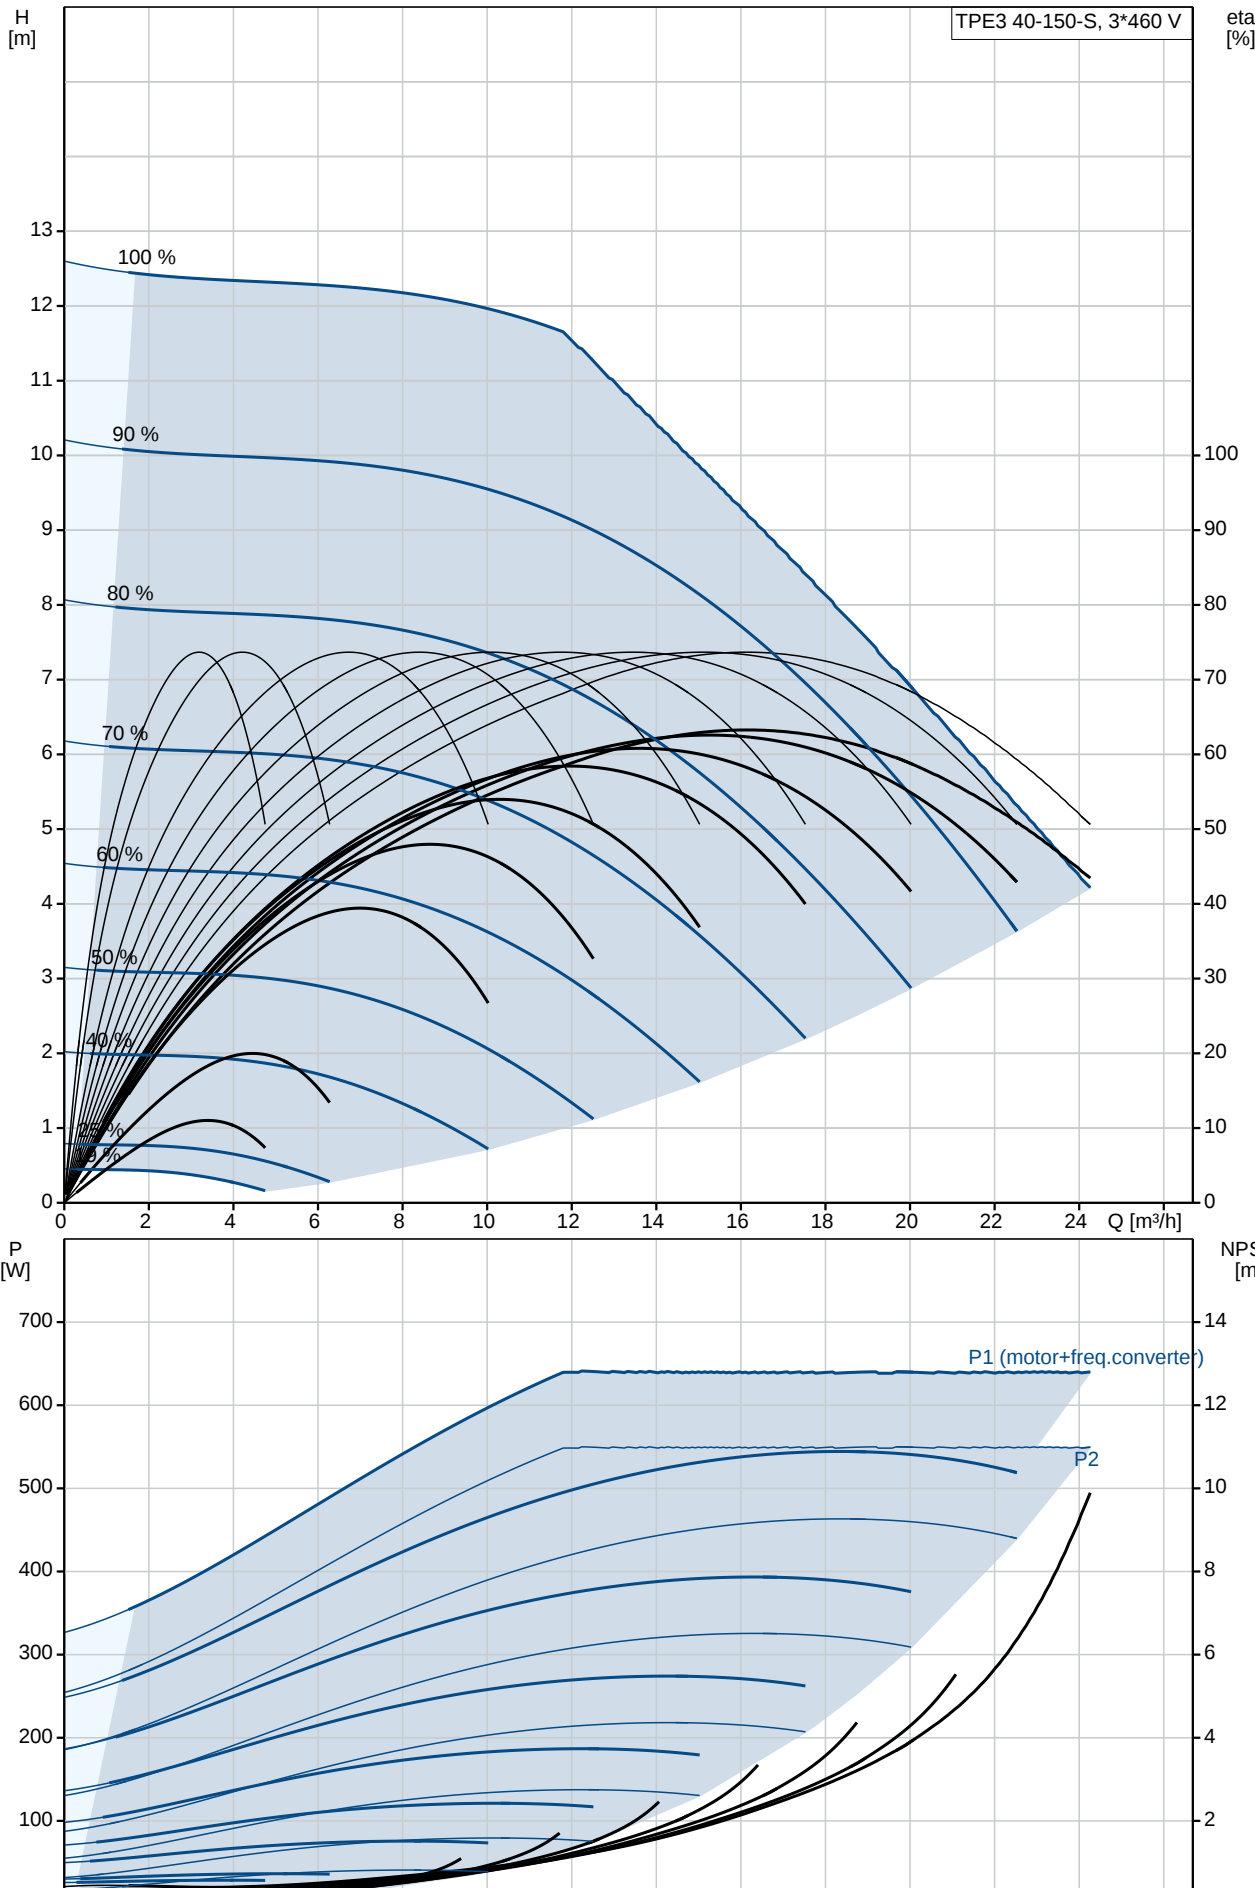


99272209 TPE3 40-150-S 50 Hz


cos phi
eta

TPE340-150-S + 71A 0.55 kW 3*460 V, 50 Hz

I
[A]

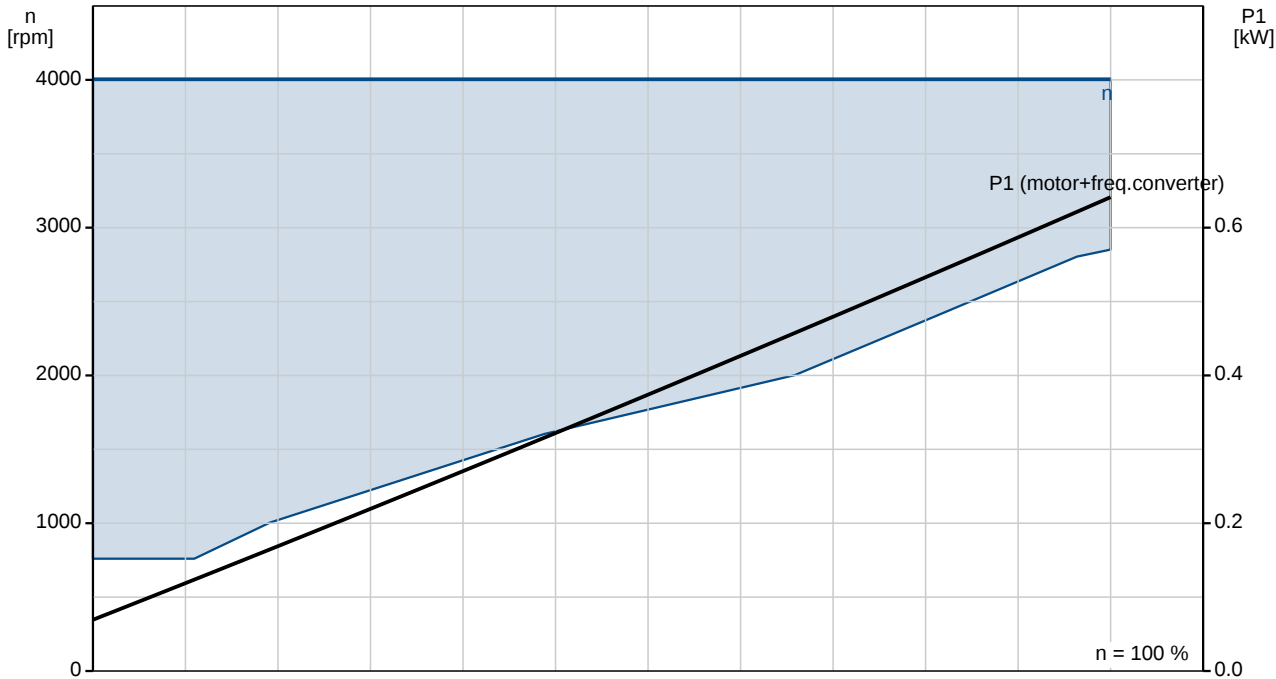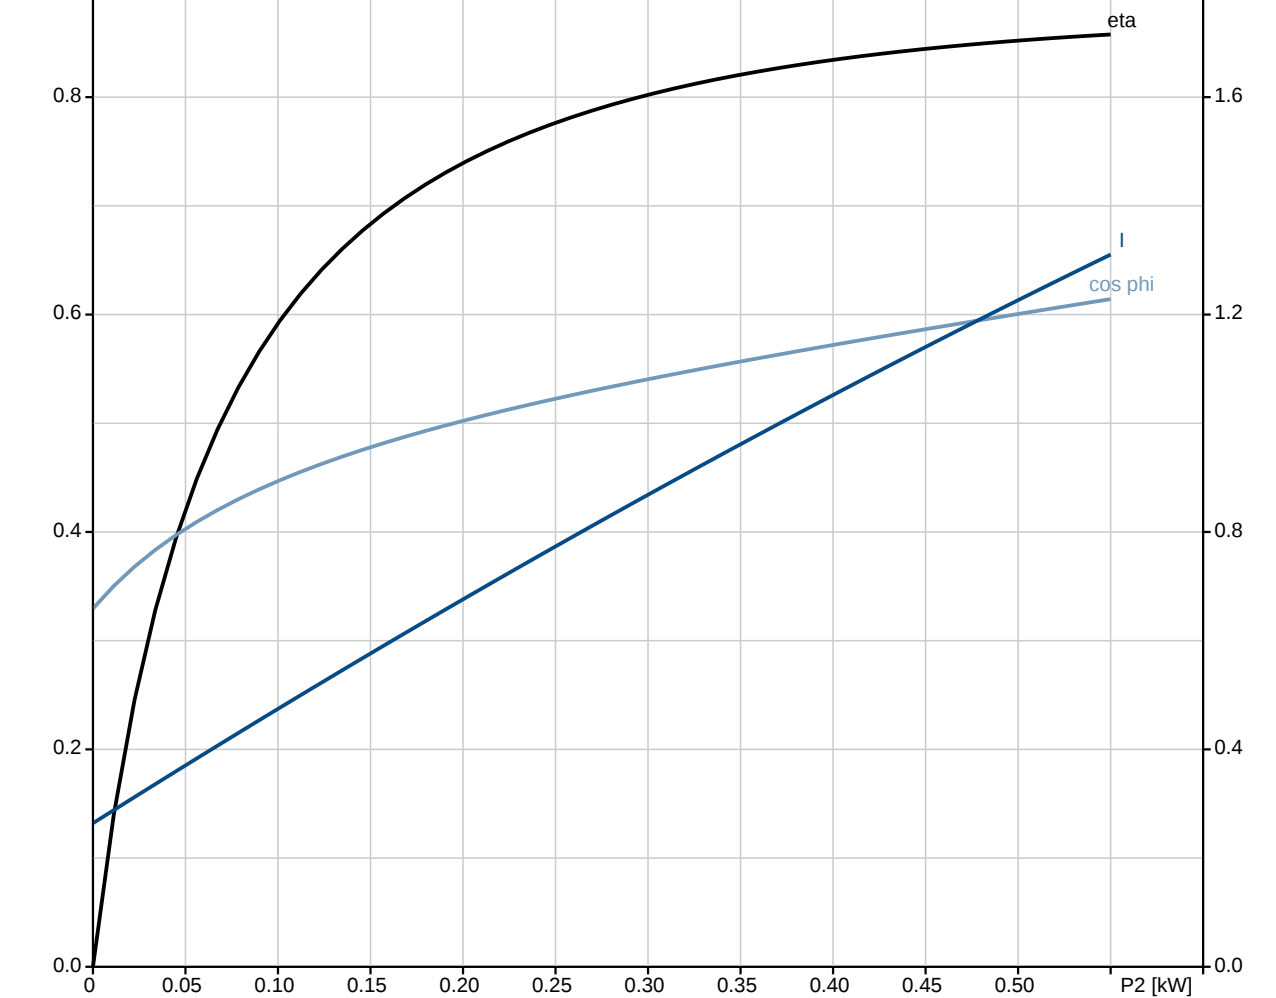

99272209 TPE3 40-150-S 50 Hz

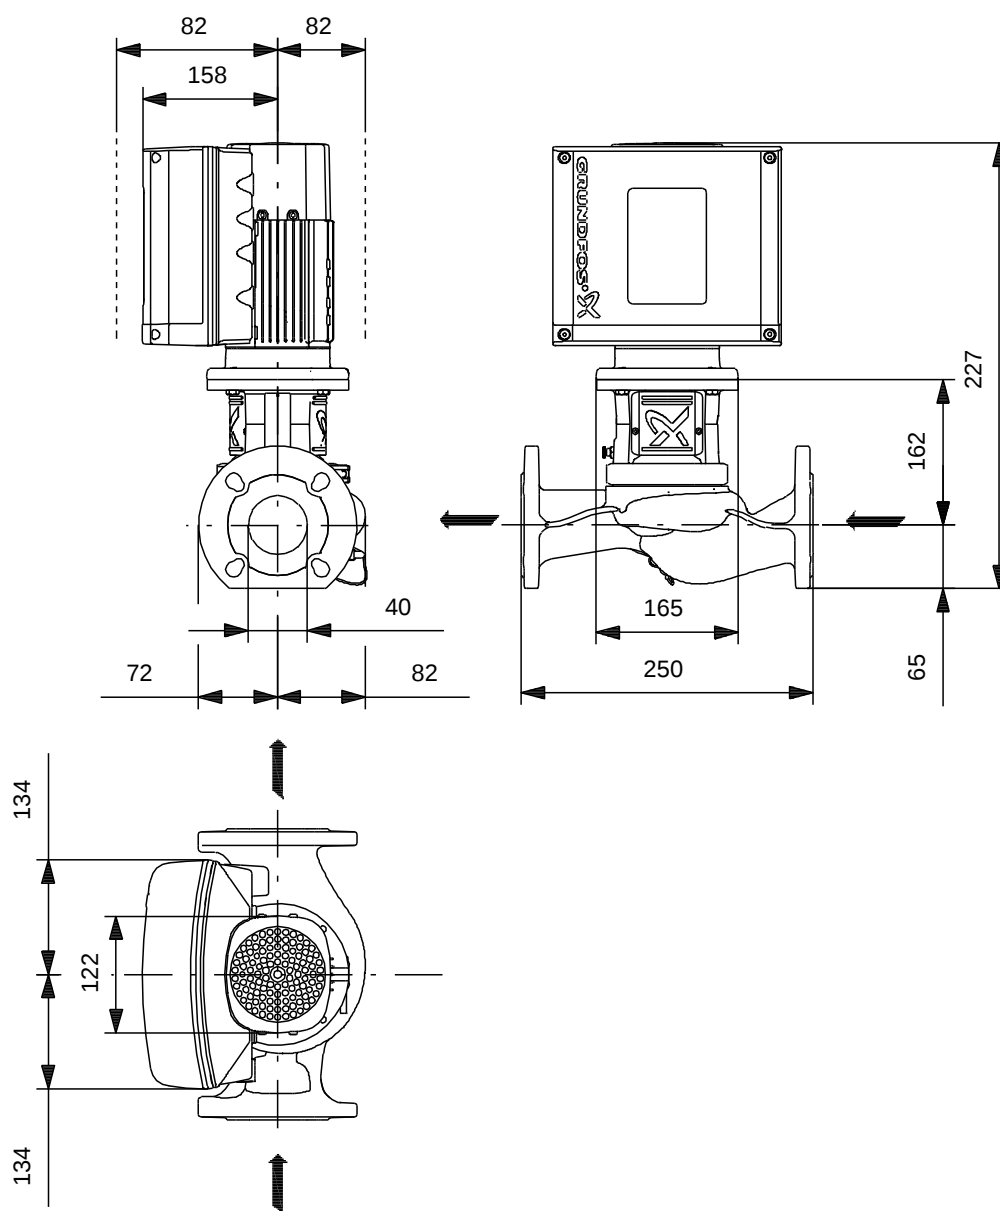

Note! All units are in [mm] unless others are stated.
Disclaimer: This simplified dimensional drawing does not show all details.

99272209 TPE3 40-150-S 50 Hz



Note! All units are in [mm] unless others are stated.

*Disclaimer: The information about the Grundfos pump in this document may be outdated.
Data may be subject to alterations without further notice.
Please contact us to verify the data above is still accurate/up-to-date.*

All information is copyright Grundfos.



info@lenntech.com

www.lenntech.com

tel. +31-15-261.09.00

fax. +31-15-261.62.89